

The Manual Hi-Lo foundation uses a manual crank to raise and lower the mattress/foundation up to 10".



SleepSafe® (Low Bed)



SleepSafe[®] **II** (Medium Bed)



⊃**SleepSafer**® (Tall Bed) ○ Dual View



○SleepSafe[®] Extension Bed
○ Dual View ○ with Extension Top



SleepSafeBed.com | 866.852.2337

3629 Reed Creek Drive | Bassett, VA 24055 | FDA Registered

Table of Contents

- 1 Pre-Assembly Information
- 2 Component Chart #1
- 3 Component Chart #2
- 4 Mattress Information
- 5 Safety Rail Adjustment Instructions
- 6, 7 Assembly Guide: SleepSafe Low Bed SleepSafe II Medium Bed
- 8, 9 Assembly Guide: SleepSafer Tall Bed SleepSafer Tall Bed Dual View
- 10, 11 Assembly Guide: SleepSafe Extension Bed / Extension Top
- 12 Padding Information
- 13 Final Installation Checklist
- 14 Operator's Guide
- 15 Popular FAQ's / Maintenance
- 16 Warranty Information
- 17 DME Provider / Technical Support
- 18 Serial Number

This guide is available as a PDF. Contact Customer Service at 866.852.2337 for more information.







Allen and Torx Wrenches (Supplied)



Flat and Phillips Head Screwdrivers



3/8" Open or Closed End Wrench



Two People for Assembly

Attention! Read Before Assembly

• KEEP THIS PRODUCT & ASSEMBLY GUIDE. IT CONTAINS THE BED'S <u>SERIAL NUMBER</u>

- CAREFULLY REMOVE AND LAY OUT ALL COMPONENTS. FAMILIARIZE YOURSELF <u>WITH INSTRUCTIONS</u> TO FACILITATE THE ASSEMBLY OF YOUR BED.
- <u>CHECK COMPONENTS</u> AND CONTENTS OF ENCLOSED HARDWARE BAG WITH THE HARDWARE LIST ON FOLLOWING PAGES.

• IMPORTANT: FOLLOW THE INSTRUCTIONS IN THE SPECIFIED ORDER TO ENSURE THE BED IS PROPERLY ASSEMBLED.

- <u>COMPLETE ASSEMBLY</u>. ENSURE EACH COMPONENT IS INSTALLED. DO NOT OMIT ANY COMPONENT FROM INSTALLATION.
- <u>NEVER USE THIS BED IF THERE ARE ANY</u> <u>MISSING FASTENERS</u>, LOOSE JOINTS, BROKEN PARTS, TORN MESH, OR PADDING INADEQUACIES. CONTACT SLEEPSAFE BEDS AT 866.852.2337 FOR ASSISTANCE.

 <u>NEVER SUBSTITUTE OR ALTER PARTS</u>, THE PRODUCT INCLUDING SIDE RAILS, MUST BE FULLY INSTALLED PRIOR TO USE.

IF BED IS PADDED, CHECK THAT ALL

- PADDING IS FIRMLY ATTACHED.
- WARNING STRANGULATION HAZARD: STRINGS CAN CAUSE STRANGULATION! NEVER PLACE BED NEAR WINDOW WHERE CORDS FROM BLINDS OR DRAPES ARE IN REACH OF A CHILD.

- <u>KEEP REMOTE CONTROL CORD AWAY</u> <u>FROM BED</u> WHILE MOVING THE SAFETY RAIL UP OR DOWN TO PREVENT PINCHING OF THE CORD.
- <u>KEEP REMOTE CONTROL CORD AWAY</u> <u>FROM BED'S INTERIOR</u> TO PREVENT ENTANGLEMENT AND STRANGULATION
 - -----
- AN <u>UNINTERUPTED POWER SUPPLY (UPS)</u> UNIT IS RECOMMENDED IN THE EVENT OF A POWER OUTAGE.

 DO NOT SUBSTITUTE MATTRESS. IT IS SPECIFICALLY DESIGNED AND FITTED FOR A SLEEPSAFE® BED AND ITS USER.



SleepSafeBed.com | 866.852.2337

3629 Reed Creek Drive | Bassett, VA 24055 | FDA Registered

Included Componen for	ts	SAF (ION BED)	ME Interin	(10) 24 24 24 24 24 24 24 24 24 24	Shert Chennell	StfDo Milling	Stepone 2	Leven for the second se	2007 & Dev 1000
Assembly									?
Cardboard Lift	4	4	4	4	4	4	4	4	
90 mm Allen Bolt	8	12	16	28	28	12	28	28	
3/4" Hex Bolt	8	8	8	8	8	8	8	8	
Barrel Nut (If the bed is <u>unpadded</u>)	8	12	16	28	28	12	28	28	
Safety Rail Hinge Guard Assembly	2	2	1	1	1	2	2	2	
Allen / Torx Wrench Set (Various sizes)	1	1	1	1	1	1	1	1	
Square Bit Driver	1	1	1	1	1	1	1	1	
Casters (Attached)	4	4	4	4	4	4	4	4	
Extension Safety Latch & 2 Screws				1	1		2	2	





SleepSafeBed.com 1-866-852-2337

3629 Reed Creek Dr. | Bassett, VA 24055

Included Component for Assembly	S	Stringer Bank	2 FEDS	(1000 (100) (1000	ME LIGON	Letton Bedwich		Stronger (1997)	156/18 (0) 19 (0
Manual Hi-Lo Frame	1	1	1	1	1	1	1	1	
Crank Set: Extension, Crank, Bolt, Plugs	1	1	1	1	1	1	1	1	
Mattress	1	1	1	1	1	1	1	1	
Headboard and Footboard Set	1	1	1	1	1	1	1	1	
Side Panel	2	2							
Front Panel			1	1	1	2	2	2	
Back Panel			2	2	2				
Safety Rail	2	2	2	2	2	4	4	4	
Extension Bed End Panel				2	2		2	2	
Extension Bed Side Panel				2	2		2	2	
Extension Bed SuperScreen Top					1			1	z

SleepSafe Bed Mattress Information

SleepSafe Bed® – Our Memory Foam Mattress with Gel Technology


SleepSafe® Bed mattress support surface provides optimized pressure redistribution, rapid heat dissipation, and increases breathability compared to standard foam.

• Reduced incidence of pressure ulcers by channeling heat away from the body much faster than standard foam, virtually ridding perspiration moisture.

• Superior pressure redistribution achieved by providing more support and less cradling at higher levels of compression, distributing pressure over a larger surface area and eliminating static fatigue.

How Does It Work?

The technology works by allowing air to pass through open cells, channeling it away from the body instead of trapping it within the closed cells of traditional memory foam. The infusion of gel polymers throughout the foam contributes both cooling properties and the virtual elimination of static fatigue. As a result of the marriage between open cell foam and gel infusion, the mattress holds its shape better, redistributes pressure over a larger surface area, and successfully wicks heat away from the body, leaving patients cool, dry, and comfortable.

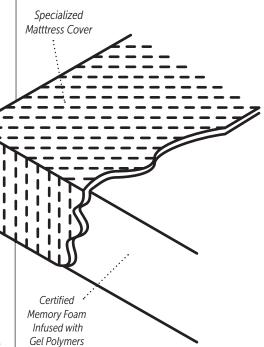

Foam products meet the following criteria:

• Performance - Tested

Made without Ozone Depleters

Made without Formaldehyde

• Methylene Chloride - Free

Environmentally Innovative

Material Certification

Mercury, Lead and Heavy Metal Free

- Low Emissions (VOC's)
- BPA Phthalate Free
- CFC Free
- BHT Free
- PBDE Free
- Emissions Tested
- Content Tested

Other notes about the foam in mattresses:

- Foam products use a blend of natural oil-based and conventional polyols.
- Benefits farmers looking for a new market for crops .
- Polyol is made partially from plant-based renewable oils such as soy bean and castor beans.



Δ





Safety Rail Adjustment: Up and Down



Does the Safety Rail need adjustment?

For proper operation, the pin should be centered in the strike. If not centered, follow these steps to center the pin in the strike.




Remove Strike from Bed Post.

Use Drill with Torx bit to remove screws from the Strike. Gently tap the strike out of the bed post with hammer or mallet to access.



Adjust Set Screw.

Use Torx 10 wrench to adjust set screw. Keep in mind which direction that you need to adjust the pin. If the pin needs to be raised, turn the set screw clockwise. If the pin needs to be lowered, turn the set counter-clockwise.

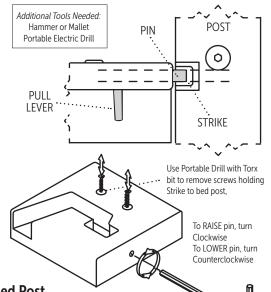



Does the Safety Rail need adjustment?

When up and secure, check the spacing between the end of the safety rail and the headboard and footboard legs. They should be spaced evenly.



Remove Safety Rail and adjust the play.

If spacing is not even, or there is too much side-to-side play in the rail. turn the black hex bolt using the 1/4" Allen Wrench provided .






SleepSafeBed.com 1-866-852-2337

3629 Reed Creek Dr. | Bassett, VA 24055

Reinsert Strike into Bed Post.

Check to see if the Pins are centered properly within the Strikes.


Safety Rail Adjustment: Side by Side

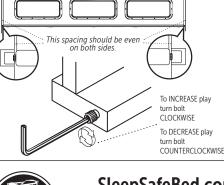

Assembly Guide

✓ SleepSafe (Low Bed) ✓ SleepSafe II (Medium Bed)


After unpacking bed and checking the contents

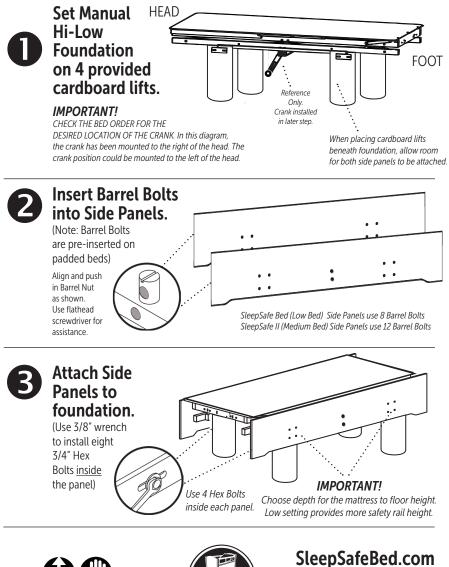





1-866-852-2337 3629 Reed Creek Dr. | Bassett, VA 24055

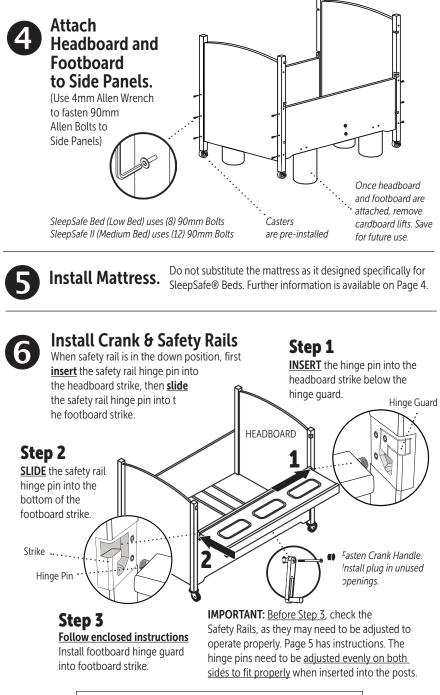


IMPORTANT: Once installed, use both hands to bring the safety rail up and attach it to the posts. Verify that it latches securely to both posts,

Assembly Guide

✓ SleepSafer (Tall Bed) ✓ SleepSafer (Dual View)


After unpacking bed and checking the contents

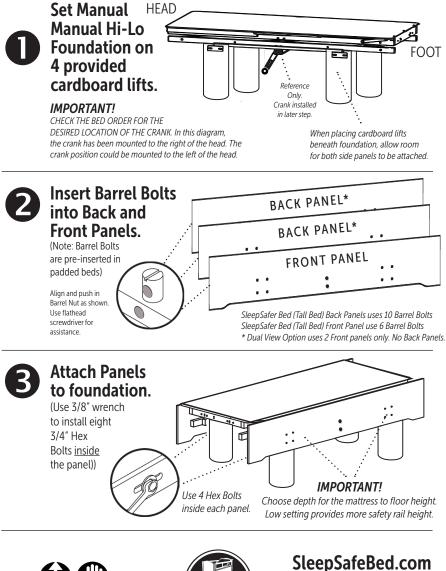






1-866-852-2337 3629 Reed Creek Dr. | Bassett. VA 24055

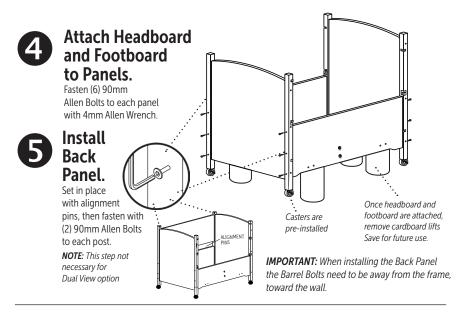

Install Mattress. Do not substitute the mattress as it designed specifically for SleepSafe® Beds. Further information is available on Page 4.

Install Crank & Safety Rails

When the bottom safety rail is in the down position, <u>insert</u> the hinge pin into the headboard strike, then <u>slide</u> the hinge pin into the footboard strike. For SleepSafer Tall Beds, and SleepSafe Extension Beds, both hinge pins on the top rail slide into the strikes.

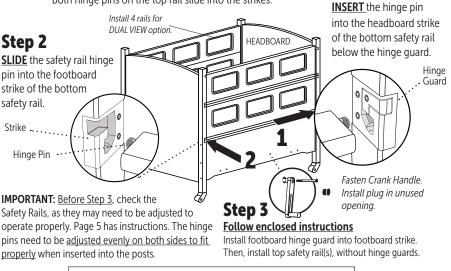

IMPORTANT: Once installed, use both hands to bring the safety rail up and attach it to the posts. Verify that it latches securely to both posts,


Assembly Guide


✓ SleepSafe[®] Extension Bed (w/SUPERSCREEN Top)

After unpacking bed and checking the contents

Set Extension Side Rails Upside Down and on their Legs.

Assemble this with two people, otherwise one person can assemble one panel at a time after the the rest of the bed is assembled.



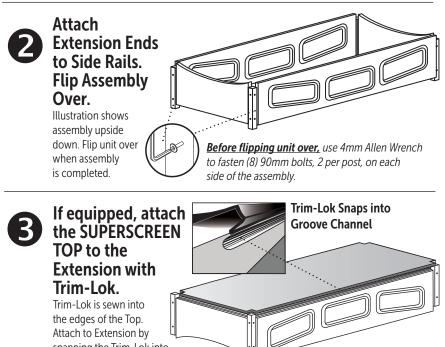


snapping the Trim-Lok into the grooves on the edge of the Extension.





SleepSafeBed.com 1-866-852-2337

3629 Reed Creek Dr. | Bassett, VA 24055

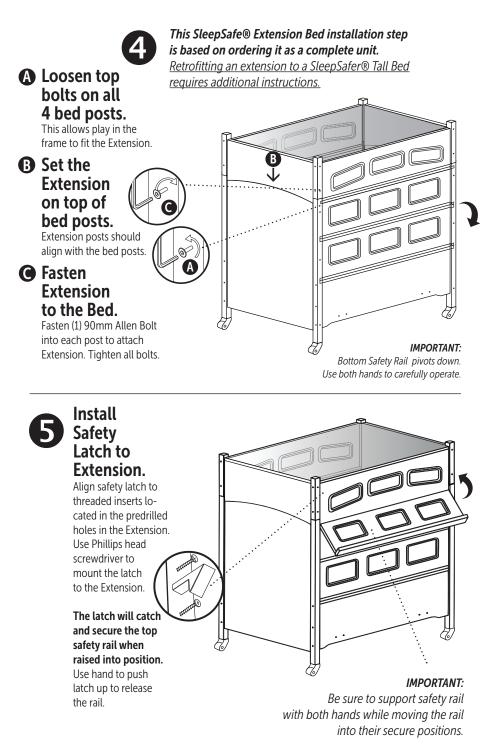

SleepSafe Bed Padding Information

Materials:

- 70 Denier Nylon Fabric Cover with a Fluid Resistant Healthcare Coating
- 3/4" High Density Foam Padding

Padding Features:

The safety rail pads extend up and over the rails and attach to the outside of the safety rails. The headboard and footboard pads extend to the top and to the edges of the legs of headboard and footboard.

- Padding covers the corner posts
- Anti-Static
- Non-allergenic
- Bacteria Resistant
- Stain Resistant
- Malodor Protection
- Fluid Resistant
- Fungal Resistant
- Flame Retardant
- Tear Resistant

Padding Attachment:

• Trim-Lok secures padding to the Safety Rails. Velcro® secures padding to the inside panels.

Padding Maintenance

 For cleaning, use warm water and a mild cleanser. If the padding is over the windows, it can be removed and cleaned. If the padding is around the windows, please do not remove. It is best to clean the padding in its place.

• Do not machine wash.


Important Note:

• Padding is installed at the factory and will cover ALL 4 sides. Padding only 1 or 2 sides is NOT an option.

• Padding removal causes gaps between the mattress and the bed's interior.

Padding questions?

• Please contact customer service for any specific information about padding.

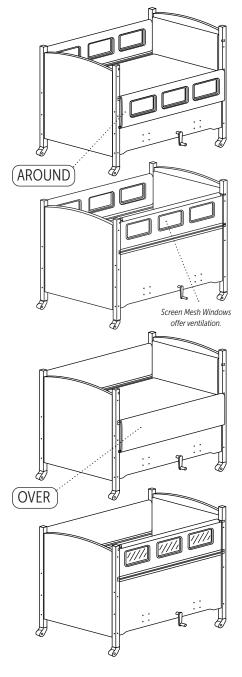

Final Bed Installation Checklist




Check all bolts to see that they are tight.

Be sure all fasteners that hold the components are hand tightened with wrenchs.



Check Safety Rails to be sure they operate and latch properly.


Safety Rails should pivot correctly, align properly and securely latch into the gate located on the bed posts.

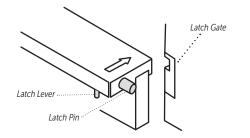

B

Check fit between headboard, footboard, bed sides and mattress.


The mattress should always fit snugly against the sides. If not, contact the DME or Customer Service at SleepSafe Beds.

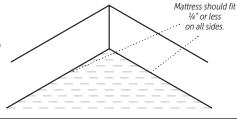



Check Bed Operation with the Hand Crank.


This foundation uses a manual crank to control the height of the foundation. The range of this up and down movement is around 10 inches. It should operate smoothly and easily.





For Extensions, check operation of Safety Latch holding the top Safety Rail.

Top Safety Rail should set in place when lifted up and into place on the Extension.

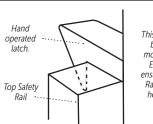

This latch should be properly mounted to the Extension to ensure top Safety Rail is securely held in place.

Operator's Guide: Manual Hi-Lo

Operating the Manual Hi-Lo Foundation

This foundation uses a manual crank in the front of the bed to control the height of the foundation. The total range of this up and down movement is around 10 inches.

To move the foundation up, turn the Crank CLOCKWISE.

To move the foundation down, turn the Crank COUNTERCLOCKWISE.

Handling, operating and securing the Safety Rails.

The top Safety Rail on the SleepSafer[®] (Tall Bed) is removable. The top Safety Rail on the SleepSafe[®] Extension Bed is not removable because it flips up and latches onto the extension.

It is always recommended to handle the Safety Rails gently and firmly with both hands. Be sure both sides of the Safety Rail are securely attached to the post before leaving the bed alone.


How the Casters Work.


The casters are pre-installed at the factory in the bottom of the headboard and footboard legs. It is recommended that the casters are locked when the bed is in use to add to the bed's stability.

The casters are locked when the tab is in the down position. Unlocked when the tab is up.





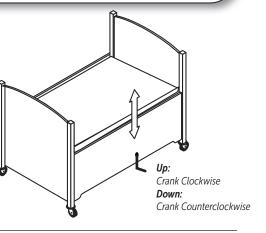

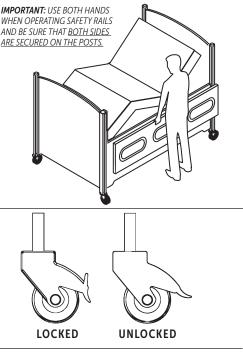

SleepSafeBed.com 1-866-852-2337

Frequently Asked Questions

How do I get replacement parts? What should I do if I have a repair problem?

Please call your Durable Medical Equipment (DME) provider that helped you purchase the bed. They should be able to help with any problem you may have. If your original DME provider cannot help you with replacement parts or repair, please contact us directly at 866-852-2337 so we may assist you.

Is there a battery backup system for beds using electricity in case of a power failure?

Yes. Battery backup systems (UPS) are typically available from office supply retailers. We recommend that you purchase a UPS battery back up unit such as APC's ES 750. This unit will give enough power to operate the bed for a limited time. This unit has 6 battery powered outlets to provide power for other devices as well.

My child's medical needs have changed. Can I change the foundation?

Yes. Most SleepSafe[®] Bed foundations can be converted to another bed. To convert a SleepSafe Bed foundation, you will need to purchase a Conversion Kit from SleepSafe[®] Beds. Insurance may or may not cover the additional cost of the conversion kit. It may be necessary to submit another letter of medical necessity justifying the change. You will need to make the purchase through your local DME provider of SleepSafe[®] Beds. Give us a call, toll-free, at 866-852-2337 for more information about SleepSafe[®] Bed conversions. We will be happy to assist you.

Can I buy a replacement mattress?

Yes, a replacement mattress may be purchased for your SleepSafe® Bed. Our mattresses are custom made to fit your SleepSafe® Bed based on whether the bed is padded or unpadded. Also, if the mattress was ordered for a SleepSafe Bed[®] with custom dimensions, it will need to be repaced accordingly. All SleepSafe[®] Bed mattresses are designed to avoid possible injury by reducing the gaps between the mattress and the sides of the bed. This is designed to reduce the chances of burrowing or entrapment.

How do I clean my SleepSafe[®] Bed?

All surfaces of a SleepSafe[®] Bed can be cleaned with water and mild detergent using a soft cloth. Please avoid any abrasives and solvents.

Annual Maintenance Checklist



I Tighten all bolts on panels and posts.

Use provided Torx and Allen Wrenches to hand tighten. Avoid power tools.



Lubricate working components beneath the bed.

Lubricate the pins, actuators and hinges.



If necessary, adjust Safety Rails to insure proper operation. See page 10 for instructions on how to adjust the position of the safety rail side by side and up and down.

15

Bed/Mattress Warranty Information

Full One-Year SleepSafe® Bed Warranty

The SleepSafe® Bed is warranted against defects in workmanship or components for a period of one year from the date of purchase. Sleep Safe Beds, LLC will repair or replace any defective part at no cost to the purchaser if the shipping of the part is within the continental United States.

Limited Five Year SleepSafe® Bed Warranty

During the second through fifth years from the date of purchase, SleepSafe Beds, LLC will replace any part found to be defective. Purchaser shall pay all service and shipping costs related to the replacement of the defective part.

Terms and Conditions for SleepSafe® Bed Warranty

A SleepSafe® Bed is expressly prescribed for a single user. This warranty will cover the bed for this user only. Warranty coverage beyond this use is handled on a case by case basis. This warranty applies to normal use and does not cover any damage caused by excessive wear, abuse, misuse, mishandling or modification of the product.

SleepSafe® Bed Mattress Warranty Information

All SleepSafe® Bed models are shipped with a CertiPUR-US® memory foam mattress with gel infused technology. This support surface provides optimized pressure redistribution rapid heat dissipation and increases in breathablity compared to standard foam. Memory foam infused with gel polymers is designed for patient comfort as well as clinical superiority. Benefits include: reduced incidence of pressure ulcers by channeling heat away from the body significantly faster than standard foam, virtually eliminating perspiration moisture. The mattresses are water resistant, but are not waterproof.

Full One-Year Warranty for SleepSafe® Bed Mattress

Full one year warranty from date of purchase. SleepSafe® Beds, LLC will replace the mattress due to a defect in the materials and workmanship of the mattress, at no cost to the purchaser.

Limited Five Year Warranty for SleepSafe® Bed Mattress

During the second to fifth year, SleepSafe® Beds, LLC will replace the mattress due to a defect in the materials or workmanship of the mattress, with the shipping costs to be paid by purchaser.

Terms and Conditions for SleepSafe® Bed Mattress Warranty

Any breakdowns or deterioration of the product caused by factors other than a defect in the materials and workmanship of the mattress, such as repeated exposures to bodily fluids by incontinence, are not covered by this warranty.







3629 Reed Creek Dr. | Bassett, VA 24055

Durable Medical Equipment Provider

Bed Serial #	
Installation Date	
DME Provider	
DME Contact	
DME Address	
DME Phone	
DME Email	
Installed by	

Customer Service & Technical Support

SleepSafe Bed Support

Hours: 8 AM to 5 PM / M-F / EST Toll Free: 866.852.2337 Local: 276.627.0088 Fax: 276.627.0234 Web: SleepSafeBed.com

In case of an EMERGENCY after hours, please call 866-852-2337 for instructions on how to access the on-call technician.

DME Provider Support

DME:
Conact:
Phone:
Email:
Web:



SleepSafeBed.com | 866.852.2337

3629 Reed Creek Drive | Bassett, VA 24055 | FDA Registered WI-820.120-3 Manual Hi-Lo [3] Rev. 05